



Replacing Roland HD-1 hi-hat pedal rubber pad

These instructions are from memory, but pretty sure this is more-or-less correct...

1. Lean drum kit on its side (eg. on a sofa) and unscrew square bolt (by hand or with an adjustable shifter) to release hi-hat pedal from frame:

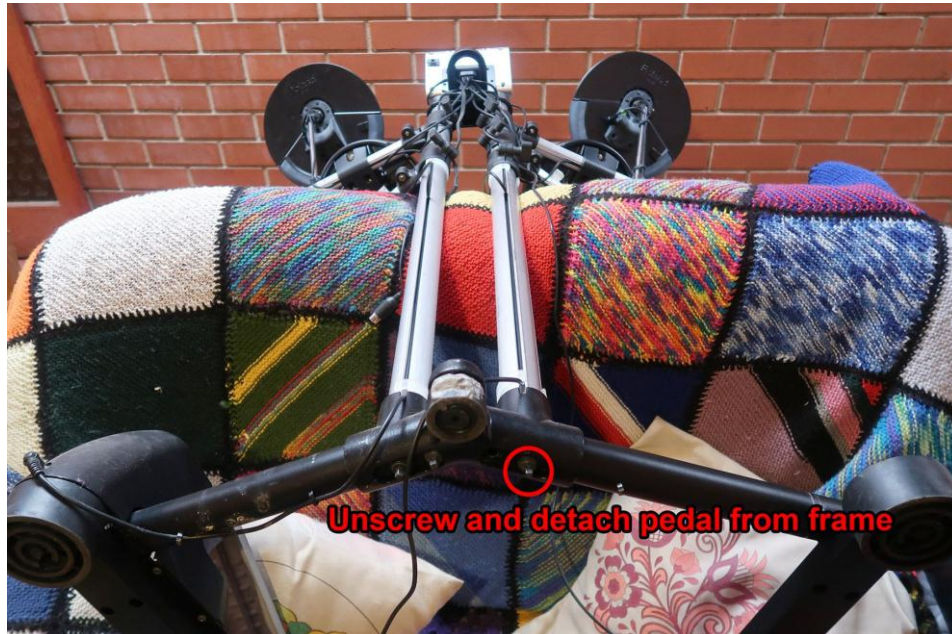


2. Unplug and unhook hi-hat pedal cable:

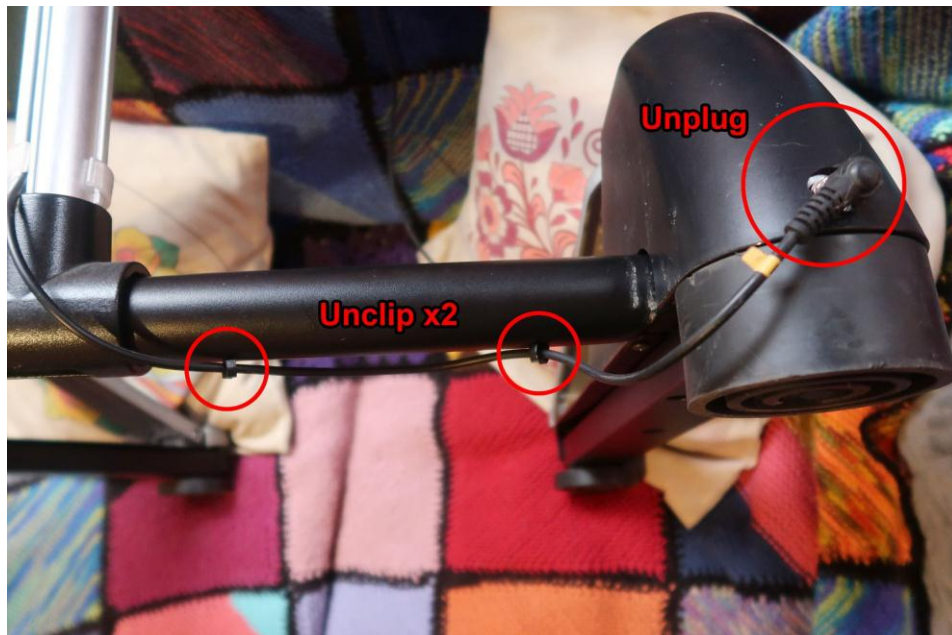


3. Unhook pedal spring? This may not have been necessary, can't quite recall sorry. If you can leave it on, then great, because it's a little fiddly to reattach!



4. Unscrew recessed allen key screws x4 on the underside, being careful not to let them fall inside the base:

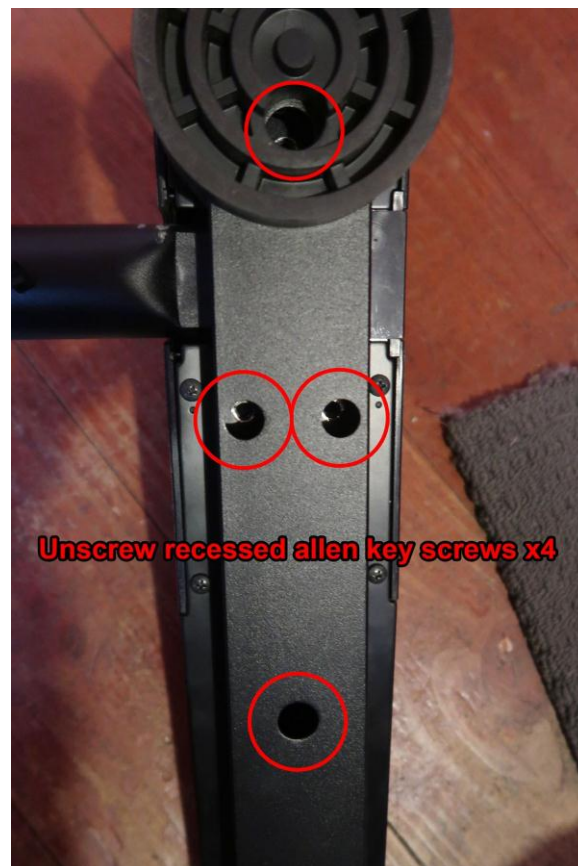

5. After removing that piece, you will then see 4 more screws that need to be removed:

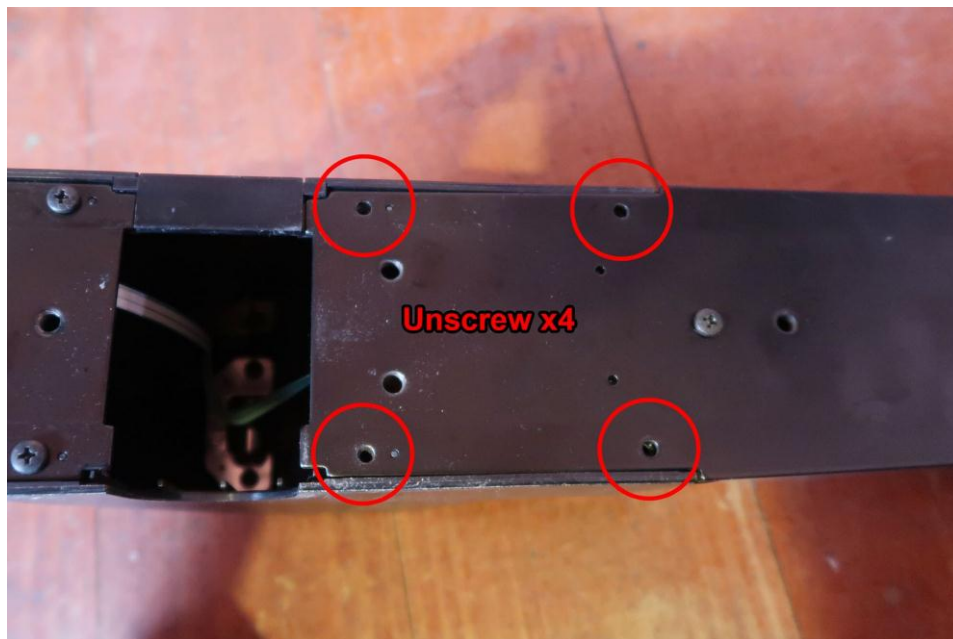

6. Remove cover (being careful of exposed electronic sensor strip), remove and replace rubber pad:



7: Reassemble.